

LED FLAT PAR RGBW

DMX CONTROL TABLE



2-CH Mode					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Colour Macro	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12		
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12		

3-CH Mode 1					
CH1	Master Dimmer	000	-	255	Master-Dimmer (0 - 100%)
CH2	Strobe	000			No Function
		001	-	255	Stroboscope (Speed 0 - 100%, 1 Hz - 20 Hz)
CH3	Colour Macro	000	-	004	Blackout
		005	-	015	Red
		016	-	026	Green
		027	-	037	Blue
		038	-	048	Yellow
		049	-	059	Magenta
		060	-	070	Cyan
		071	-	080	White
		081	-	150	Colour Jumping (speed slow - fast)
		151	-	220	Colour Fading (speed slow - fast)
221	-	255	Sound Control (mic sensitivity min. - max.)		

3-CH Mode 2					
CH1	Red	000	-	255	0% to 100%
CH2	Green	000	-	255	0% to 100%
CH3	Blue	000	-	255	0% to 100%

3-CH Mode 3					
CH1	Dimmer	000	-	255	Master Dimmer 0-100%
CH2	Strobe	000			No Function
		001	-	255	Stroboscope (Speed 0 - 100%, 1 Hz - 20 Hz)
CH3	Colour Macro	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
129		192	Colour Jumping Speed slow -> fast / Colour 1 -> 12		
193		255	Colour Fading Speed slow -> fast / Colour 1 -> 12		

4-CH Mode					
CH1	Red	000	-	255	0% to 100%
CH2	Green	000	-	255	0% to 100%
CH3	Blue	000	-	255	0% to 100%
CH4	White	000	-	255	0% to 100%

8-CH Mode					
CH1	Dimmer	000	-	255	0% to 100%
CH2	Strobe	000			No Function
		001	-	255	Stroboscope (Speed 0 - 100%, 1 Hz - 20 Hz)
CH3	Red	000	-	255	0% to 100%
CH4	Green	000	-	255	0% to 100%
CH5	Blue	000	-	255	0% to 100%
CH6	White	000	-	255	0% to 100%

CH7	Colour Macro (override RGBW)	000	-	005	Colour off
		006	-	013	Red
		014	-	021	Amber
		022	-	029	Yellow warm
		030	-	037	Yellow
		038	-	045	Green
		046	-	053	Turquoise
		054	-	061	Cyan
		062	-	069	Blue
		070	-	077	Lavender
		078	-	085	Mauve
		086	-	093	Magenta
		094	-	101	Pink
		102	-	109	Warm White
		110	-	117	White
		118	-	125	Cold White
		126	-	128	Colour Jumping Stop
		129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12		
CH8	Sound (overrides CH3 - CH7)	000	-	005	Sound Control OFF
		006	-	255	Sound Control ON Low -> High (Mic Sensitivity)